


ROD SHOULD FACE
FORWARD AND
SLIDE THROUGH
GROMMET IN
FRAME

BOLTS INSERT THROUGH
BRACKET THEN GROMMET AND
HAVE JAM NUT HOLDING
THEM IN PLACE

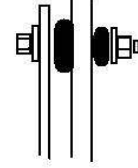

INSTALL EXHAUST
SYSTEM THROUGH
CENTER OF FRAME

PLACE BRACKET ON CAN
9" FROM FRONT EDGE

